

SB-Power Sprayer Instructions

WATER BASED SPRAYER


USE WATER BASED SEALERS ONLY!!!!

- Charge battery before each use. Approximately 6 hours of sprayer operation per charge.
- Place pail in holder then insert black intake hose into pail.
- **Sprayer Operation**

For AC use: Switches from left to right in photo— up, down, up positions

For Battery Use: All three switches up position

To Charge: All three switches in down position and plug into 110 outlet

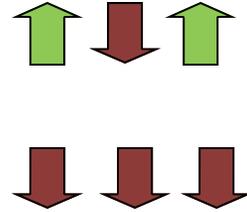

- Begin spraying (when water is in system from previous cleaning, spray into empty pail or off to side of work surface until sealer begins to spray).
- Pump will cycle on and off as you squeeze the handle on the sprayer wand—it will run while spraying then turn off. Pump motor will turn on when internal pressure is less than 45 lbs.
- For continued use or to charge while using, use extension cord with sprayer and plug into standard 110 outlet.
- Shut off sprayer when not in use to save battery life.
- Spray Nozzle Tip: Blue Tip provided—1 gallon per minute.

CLEAN AFTER EACH USE - IMPORTANT!

CLEANING INSTRUCTIONS: With **water based sealers**, flush system with 5 gallons of water after **EACH** use. Fill a 5 gallon pail with water and insert intake hose into pail with water. Spray remaining sealer than the water into an empty pail or off to the side away from the work surface for five minutes. Turn off sprayer when water pail is empty leaving water in the sprayer system. On next sprayer use, place pail of sealer in holder then insert black intake hose into the bucket. Start spraying into an empty bucket or off to the side away from work surface the leftover water that remained in the sprayer from the last cleaning. Once sealer starts spraying from the sprayer, you can start applying sealer to your surface.

DO NOT USE SOLVENT BASED SEALERS IN THIS SPRAYER!

